


French cleat should be attached to the wall by screwing through the cleat into wall stud or blocking using the fasteners provided. The cleat should be level and at the indicated height.

The lower cleat that attaches to the wall is usually loosely attached to the back or inside (unfinished) of the cabinet with one or two wood screws. Remove cleat and mount to wall. The cabinet then hangs, or rests on the wall-mounted cleat as depicted.

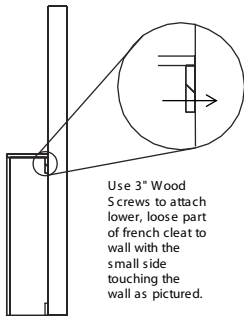

Use 3" Wood  
Screws to attach  
lower, loose part  
of french cleat to  
wall with the  
small side  
touching the  
wall as pictured.